


PRODUCT BROCHURE

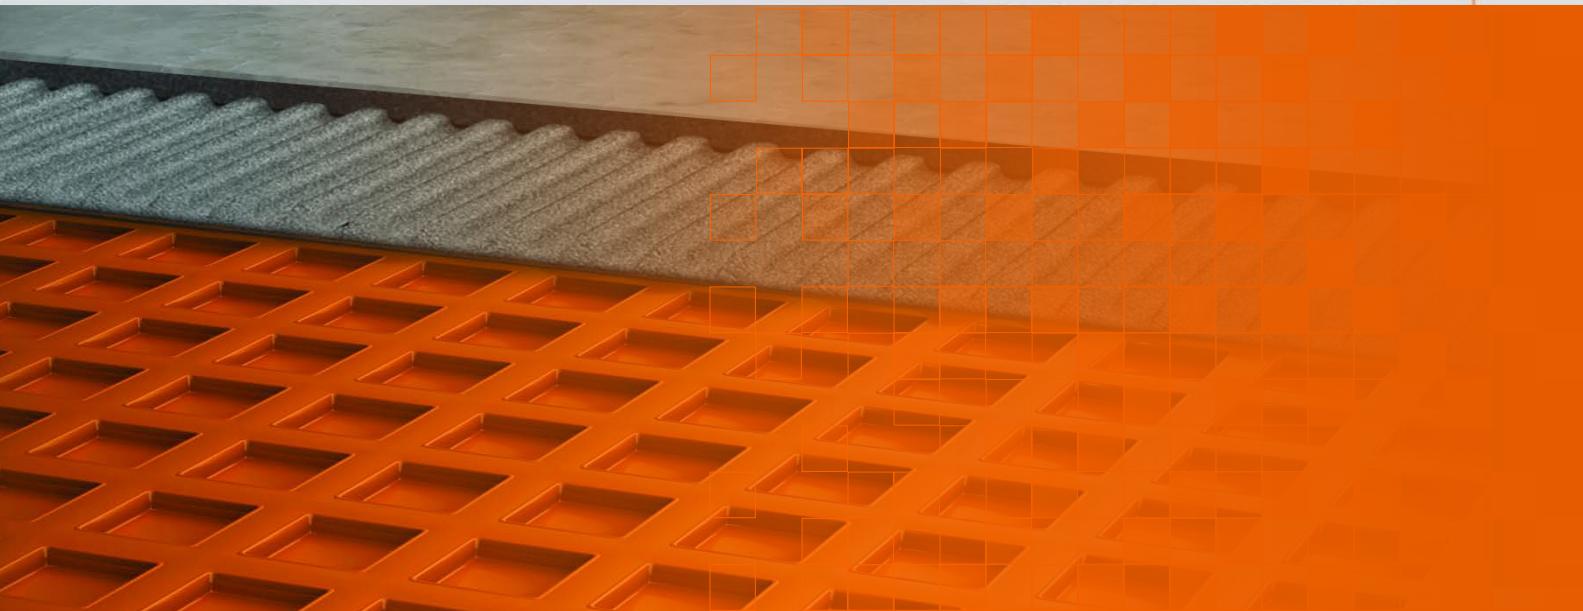

Schluter*DITRA*



schluterDITRA

schluter®-DITRA Installation Sequence



Apply PSA (Pressure Sensitive Adhesive) to the substrate or approved membrane with a 8 nap Roller. Allow PSA to tack off (changes colour from milky to clear). PSA once tacked off, becomes permanently tacky, allowing the schluterDITRA to be re-aligned upon laying – or lifted to inspect the waterproofing membrane multiple times without having to reapply adhesive.



Apply schluterDITRA to the floor, fleece side down. Solidly embed the matting into the PSA adhesive using a float or screed trowel. For joining sections of DITRA, simply abut end and side sections of adjacent sheets.





Lift up a corner of the matting to check coverage. Proper installation results in full contact between the fleece webbing and PSA adhesive.



At all wall junctions, apply 5 mm continuous bead of PU sealant.



Install the Ditra Flash 80mm Tape covering all sheet joints, using a roller compressing the tape into the sheet removing backing paper down the length of the joint.



Tile can be laid on the installed schluterDITRA immediately using Laticrete 4XLT Tile Adhesive, and Laticrete Epoxy Grout. The installation of tile must be laid back buttered also insuring full coverage of adhesive, fulling dove tail cavities of the Ditra troweled flush with the reverse side of a notched trowel.