



Art. 54
Art. 56
Grey

Art. 59.2 TPO



Art. 113.3 TPO

Art. 139.2 TPO


Art. 114.3 TPO



Art. 115.2 TPO




Art. 116.2 TPO

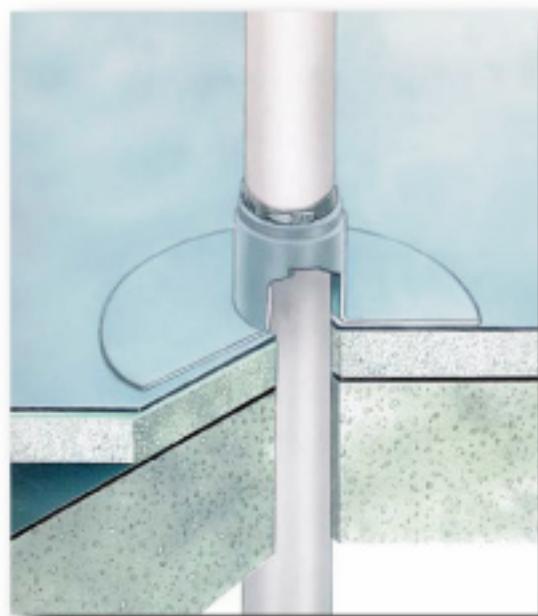


The **VAPOR-PROOF AERATOR** is suited to ventilate bathrooms, kitchens, workrooms and all the rooms where steam come from. It is so called as the vent is built in order to avoid steam build-up and its consequent dripping down along the leak pipes, when these are stressed by released steam. Available in colours: grey and brown.

ART.	54	56
D	100	125
D1	120	150
B	180	220
H	300	350

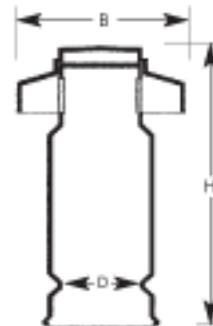



Art. 59.2 flexible collars are suitable for connecting downpipes to the waterproofing system as TPO.

ART.	59.2
B	Ø410
D	190
D1	80
D2	100
D3	125

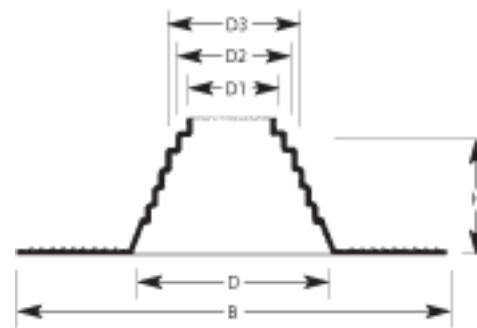


Art. 113.1 - 114.3 Pipe fittings for connecting downpipes suitable for application with synthetic membranes such as TPO.


ART.	113.3	114.3
A	34	75
B	50	80
C	60	90
D	75	100
E	80	110
F	90	115
G	93	125
I	340	127
L	-	365
H	180	180

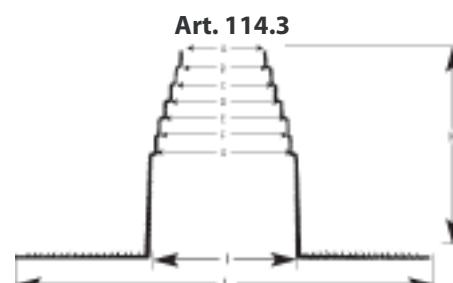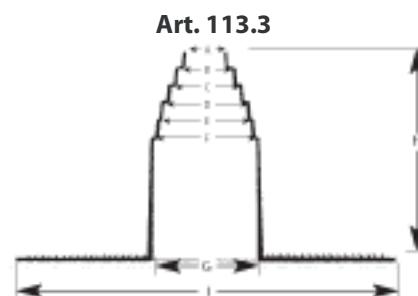

ART.	139.2
D1	20
B	155
H	120
D	50

Art. 139.2 - Ø 20 a 50 mm.

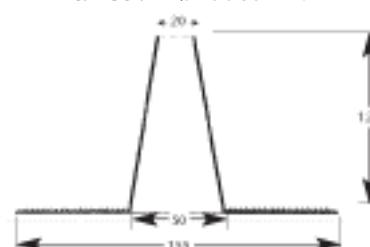

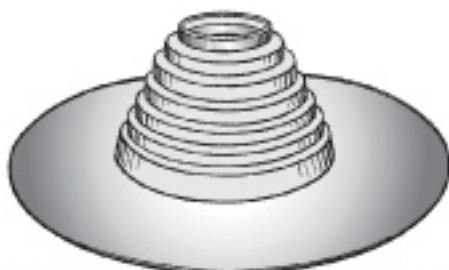


Art. 59.2




Art. 54 - Art. 55
Art. 56 - Art. 57



Art. 139.2

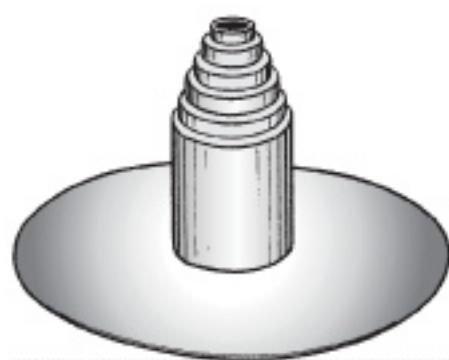


Art. 113.3 - ø da 34 a 93

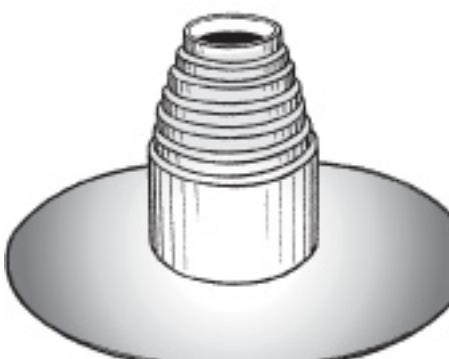


Art. 114.3 - ø da 75 a 125


- A - Aerator
- B - Bellows base
- C - First layer or piece of membrane
- D - Insulation
- E - Steam barrier
- F - Floor

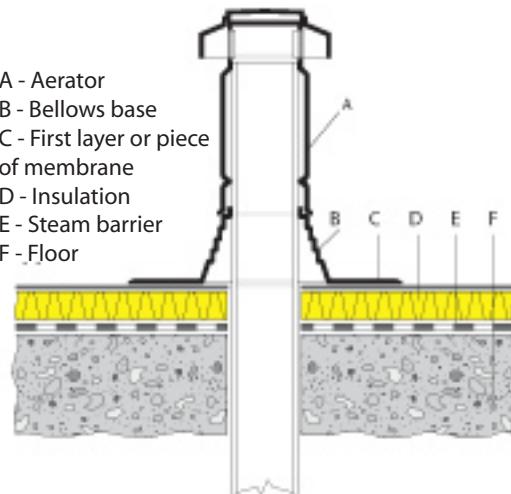

- A - Pipe fitting A
- B - Waterproof mantle
- C - Insulation
- D - Steam barrier
- E - Floor

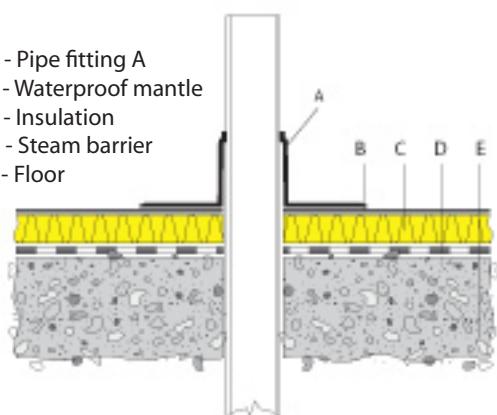

- A - Pipe fitting
- B - Waterproof mantle
- C - Insulation
- D - Steam barrier
- E - Floor

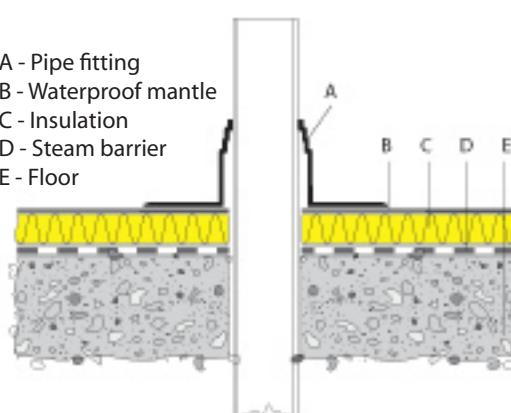

Art. 113.3 - 114.3

Install the waterproofing membrane sheet. Prepare the pipe adapter by cutting the step at the appropriate diameter. Place the adapter over the pipe and weld the flange to the waterproofing membrane using a hot air gun.

DESCRIPTION OF SPECIFICATIONS

Supply and install ITALPROFILI® pipe fitting for TPO suitable for fitting to pipe diameters 34-60-75-80-90-100-110-115-125, having a round flexible flange. Hose clips must be in stainless steel.

FLEXIBLE COLLAR Art. 59.2

Install the waterproofing membrane sheet. Prepare the bellows adapter by cutting the step at the appropriate diameter to suit the pipe. Place over the pipe and weld the flange to the waterproofing membrane. Cut the vent pipe at 31 cm. from the roof deck level and fit suitable diameter vapour-proof aerator.

DESCRIPTION OF SPECIFICATIONS Art. 54 - 55 - 56 - 57

Supply and install ITALPROFILI® vapour-proof aerator for bathrooms, kitchens etc. for pipe Ø 100 mm. h 305 mm.- Ø 125 mm. h 350 mm. complete with base and fitting for dealing to the waterproofing membrane.